

**1. Loop the strap around the axle of the vehicle being transported. *Enrolle la correa alrededor del eje del vehículo que está siendo transportado.***



**2. Bring both axle strap D-ring ends together. *Junte los dos extremos de la correa del eje con la argolla D.***



**3. Connect your ratchet onto both of the D-ring ends. *Conecte el trinquete a ambos extremos de la argolla D.***



**4. As you tighten your ratchet strap, make sure the protective sleeve is snug around the axle. *Mientras aprieta la correa del trinquete, asegúrese de que el mango protector esté ajustado alrededor del eje.***